


## **INSTALLATION GUIDE**

Lighting Fixtures equipped with EMC-30/40/60 Emergency Battery Backup

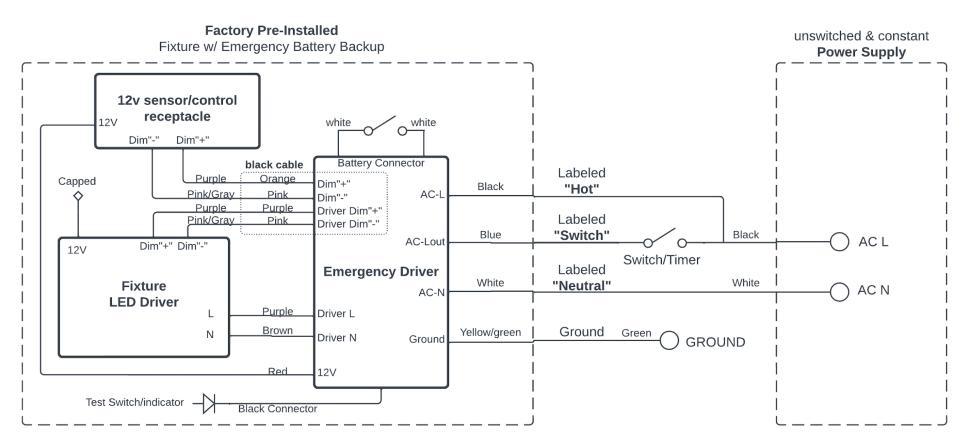

## **NOTE**

- Connect "HOT" <u>DIRECTLY</u> to the panel/breaker, or a 24/7 unswitched & constant power supply
- "HOT" should NOT be connected to any switch/timer
- Connect "SWITCH" to "AC L" will turn on the light, disconnect will turn off the light
- Disconnect "HOT" will activate the Emergency Mode regardless of connection status of "SWITCH"
- Charge 24 hours before use
- Test switch/Indicator

Flashing Green: Charging; Constant Green: Charged; Constant Red: Emergency mode(discharging); Flashing Red: Error