
## FFL Series LED Flood Light Installation Sheet



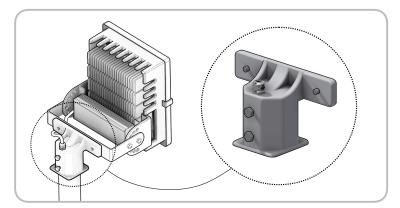

## **ACFLSF** SLIPFITTER MOUNT FOR 2" DIA. POLE

Includes: FFL50, FFL100, FFL150, FFL200

## (A)


**CAUTION:** PLEASE FOLLOW THIS INSTRUCTION MANUAL CAREFULLY TO PREVENT ANY INJURIES OR COMPLICATIONS THAT MAY ARISE.

**WARNING:** Before installing or maintaining the luminary, make sure all powers are **TURNED OFF**.

Verify that supply voltage is correct by comparing it with the label information on all fixtures

Make all connections in accordance with the NEC requirements, and make sure all luminaries are properly secured to prevent any wire complications. This luminary is to always be installed with the lens facing down and its not to exceed the maximum ambient temperature rating noted on the specification sheet.


## STANDARD INSTALLATION STEPS

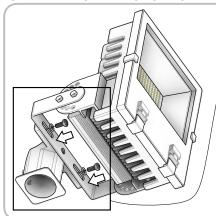

1) Loosen the [2] M8-1.25 Hex Head Bolts from the ACFLSF Slipfitter Mount. Align the Slipfitter to the FFL Handle and fasten the two pieces together using the [2] Hex Head Bolts and washers.



2) Once the Slipfitter is properly secured onto the FFL Fixture, one can place the slipfitter on top of a 2" diameter round pole and run the Power Cable from the driver to the inside of the pole to allow it to be powered with an AC Power Supply Cable. Follow the wiring

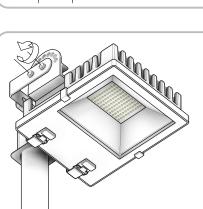

2) After properly securing the FFL to the pole with the Slipfitter, Use a wrench to remove the bolt located on the arc of holes on the side of the FFL. Once the Bolts have been removed from both sides of the FFL, the fixture will be able to rotate. Adjust the tilt on the luminaire to the desired angle. Refasten the bolts to a location that will lock the position desired.

