

FFLA with Knuckle (Default)

Includes: FFLA15, FFLA30, and FFLA50



CAUTION: PLEASE FOLLOW THIS INSTRUCTION MANUAL CAREFULLY TO PREVENT ANY INJURIES OR COMPLICATIONS THAT MAY ARISE.

WARNING: Before installing or maintaining the luminary, make sure all powers are **TURNED OFF**.


Verify that supply voltage is correct by comparing it with the label information on all fixtures.

Make all connections in accordance with the NEC requirements, and make sure all luminaries are properly secured to prevent any wire complications. This luminary is to always be installed with the lens facing down and its not to exceed the maximum ambient temperature rating noted on the specification sheet.


STANDARD INSTALLATION STEPS

The FFLA Series Flood Light is designed to be installed direction to a Junction box with the 1/2" Conduit Thread.


1. Fasten the Junction Box (not included) to the desired fixture location. Run the power supply cable through the conduit leading to the J-box.

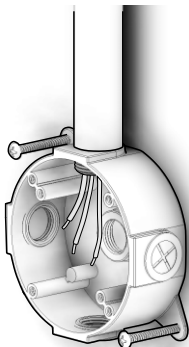


2. Install the fixture to a J-Box cover place with a 1/2" conduit threaded opening. Fasten the cover and lock in place with the lock washer included with the FFLA.

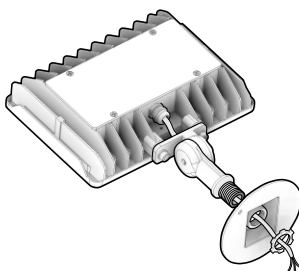

3. Follow the Wiring Diagram and properly wire the FFLA fixture to the power supply cables. Make sure the fixture is connected with the appropriate voltage power supply. All wiring must be installed by a certified electrician and must be compliant to NEC standards.

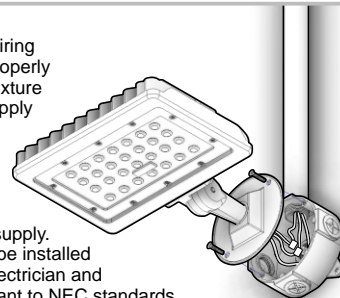

4. Fasten the Junction Box cover to the Junction Box with the appropriate screws. (not included)

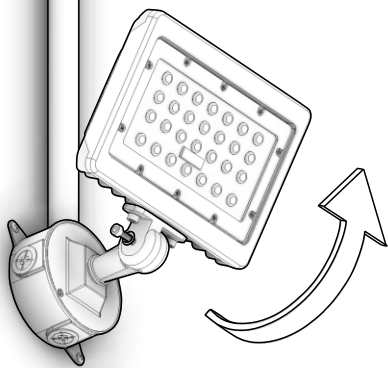

5. Using an allen wrench, Loosen the socket head machine screw on the Knuckle and adjust the tilt angle to the desired position.

6. Once adjusted, fasten the screw to lock the FFLA fixture in place.

WIRING DIAGRAM

The LED Driver input cable consists of 3 conductors: ACL (black), ACN (white), and ground (green).

These conductors are to be connected to a Power Supply Cable.

