
FHW Series LED High Bay Installation Guide




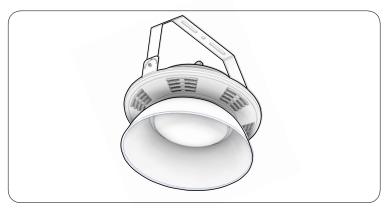

ACHWRF90-90° REFLECTOR

PART NO.	IMAGE	DESCRIPTION	QTY
ACHWRF90		90° REFLECTOR	1
10-00070		M5-0.8 Thread x 18 mm Long	3

STEP 1: Align the following holes from the ACHWRF90 with the holes on the FHW luminaire without fasteners.

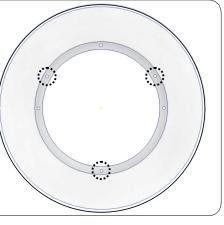

STEP 2: Using a Phillips Screw Driver, Fasten the [3] provided machine screws from the inside portion of the 90° reflector to secure it into place.

