

AC-LHA-PEM- Linear Highbay Pendant Mount Kit

Includes: FLHA2D090, FLHA2D110, FLHA2D162, FLHA4D178, FLHA4D223, FLHA4D321

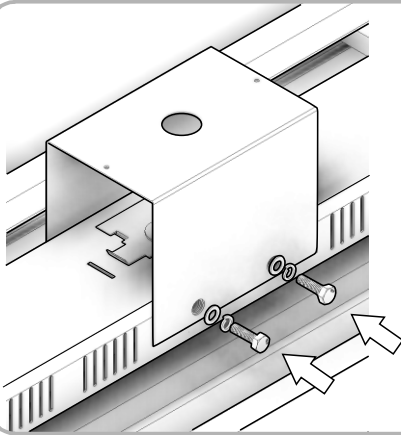


CAUTION: PLEASE FOLLOW THIS INSTRUCTION MANUAL CAREFULLY TO PREVENT ANY INJURIES OR COMPLICATIONS THAT MAY ARISE.

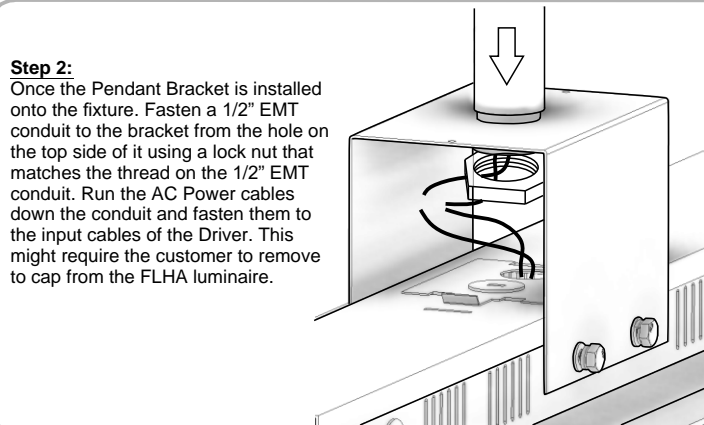
WARNING: Before installing or maintaining the luminaire, make sure all powers are **TURNED OFF**.

Verify that supply voltage is correct by comparing it with the label information on all fixtures.

Make all connections in accordance with the NEC requirements, and make sure all luminaries are properly secured to prevent any wire complications. This luminaire is to always be installed with the lens facing down and its not to exceed the maximum ambient temperature rating noted on the specification sheet.









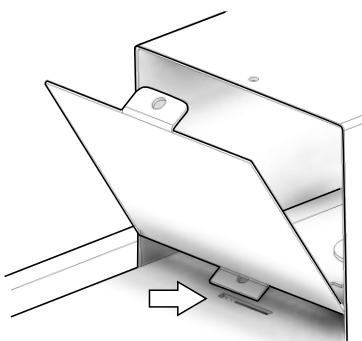
Step 1: Fasten the FLHA-ME bracket to the FLHA luminaire using the Hex Head machine screws provided along with one washer and lock washer in order to screw the bracket into place.



Step 2:

Once the Pendant Bracket is installed onto the fixture. Fasten a 1/2" EMT conduit to the bracket from the hole on the top side of it using a lock nut that matches the thread on the 1/2" EMT conduit. Run the AC Power cables down the conduit and fasten them to the input cables of the Driver. This might require the customer to remove to cap from the FLHA luminaire.

PART NO.	IMAGE	DESCRIPTION	QTY
AC-LHA-PEM		Pendant Mount Kit bracket for Linear High Bay	1
FLHA-ME-P		Cover Plate for the AC-LHA-PEM Pendant Mounting Kit.	2
10-00071		Hex Head Bolt	4
10-00026		Pan Head M4-0.7 x 6mm Long Screw	4
10-00063		Washer for M4 Screw	4
10-00065		Lock Washer for M4 Screw	4



Step 3:

Once all wiring is complete, use the two cover tabs that are provided to cover the sides of the Pendant bracket.

Step 4:

Use the two remaining screws to fasten the cover plates into place.

